

# user's manual

SongPod

model #: ID201







# Thank you for purchasing SongPod [ID201].


#### Music Dock for iPhone® and iPod®


#### Features

- · Amplified speaker system
- · Simultaneous play & charge for iPhone/iPod
- $\cdot$  App enhanced functions FM radio/alarm clock/EQ
- · 10 Watt output power
- · Virtual surround sound
- · Aux input for use with other audio devices
- · Blue ambient lighting
- · Full function remote control

# What's Included

Unpack the docking station and make sure all accessories are put aside so they will not be lost.

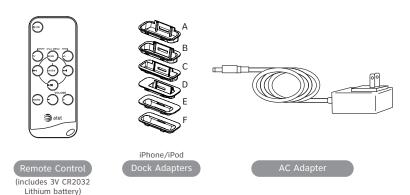



Docking Station

iPhone and iPod are registered trademarks of Apple Inc.

### Contents

Introduction	2
What's Included	3
Safety Information	5
Getting Started	
Location of Docking Station Controls	8
Location of Remote Controls	9
Power Supply	10
Dock Adapters	11
Operational Instructions	
Adapter Instructions	12
General	13
Docking Your iPhone/iPod	13
Controls	14
Dock Operation with App	15
Troubleshooting	18
Compliance with FCC Regulations	19
Specifications	20
Specifications	20
Warranty Information	21

# Safety Information

# **Warning!**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.



The lightning flash and arrowhead symbol within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.



**WARNING**: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

 $\ensuremath{\text{NOTES:}}$  Caution symbols are printed on rear of docking station.

Please refer to user's manual.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

# Safety Information

### **Important Safety Instructions**

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in this user's manual and on the unit.


- CLEANING Unplug the unit from the wall outlet before cleaning. Clean the unit using a damp cloth; do not use liquid or aerosol cleaners.
- 2. ATTACHMENTS Do not use attachments not recommended by the manufacturer.
- 3. ANTENNA Do not connect an external antenna to the unit (other than that provided).
- WATER AND MOISTURE The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- PLACEMENT Do not place the unit on an unstable table, stand, tripod, or bracket. This may result in serious personal injuries and damage to the unit.
- 6. VENTILATION The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
- PERIODS OF NON-USE If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
- OBJECTS AND LIQUID ENTRY Care should be taken so that external objects do not fall into and liquids are not spilled onto any openings or vents located on the product.
- POWER SOURCE The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit. If you are not sure, please consult the dealer or local power company.
- 10. POWER CORD PROTECTION Power supply cord should be routed so that they are not likely to be walked on or pinched by items placed upon or against it. It is always better to have a clear area from where the cable exits the unit to where it is plugged into an AC outlet.
- 11. LIGHTNING Unplug the unit from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
- OVERLOADING Do not overload wall outlets, extension cords, or integral convenience receptacles
  as this can result in a risk of fire or electric shock.
- 13. HEAT The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- DAMAGE REQUIRING SERVICE The unit should be serviced by qualified service personnel when:
   A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled onto the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.


# Safety Information

- 15. SERVICING The user should not attempt to service the unit beyond those methods described in the user's manual. Opening or removing covers will expose you to dangerous voltage and other hazards. Service methods not covered in the user's manual should be referred to qualified service personnel.
- 16. SAFETY CHECK Upon completion of any service or repair to the unit, ask the service technician to perform safety checks to determine that the product is in proper working condition.

# **Getting Started**

### **Location of Docking Station Controls**

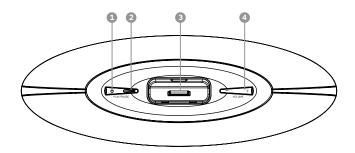


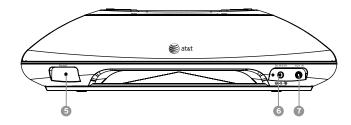

- 1. POWER ON/OFF/PLAY/PAUSE button
- 2. POWER indicator
- 3. Universal dock for iPhone/iPod
- 4. VOLUME -/+ button
- 5. FM ANT.
- 6. DC IN jack
- 7. AUX-IN jack

# **Getting Started**

### **Location of Remote Controls**

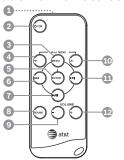

- 1. Remote Control Transmitter
- 2. O STANDBY/ON button
- 3. MENU button
- iPod MENU ➤ button
- 5. ENTER button
- 6. SKIP I◀◀ button
- 7. PLAY/PAUSE ▶/II button
- 8. SOUND button
- 9. VOLUME button
- 10. iPod MENU ▲ button
- 11. SKIP ►► button
- 12. VOLUME + button

#### **Using The Remote Control**

The 3V CR2032 Lithium battery is already installed in the remote control. Pull out the small plastic tab as shown in the illustration to begin using the remote control.

To use the remote control, point the remote control transmitter toward the remote control receiver on the front panel of the docking station and press the desired button. The effective range of the remote control is approximately 20 feet. Please note that bright sunlight or artificial light may interfere with the proper operation of the remote control.

#### **Battery Replacement**

When the remote operation becomes weak or intermittent, it is time to replace the remote control battery. Pull out the battery holder, remove the old battery and install a new 3V CR2032 Lithium battery in the holder as shown in the illustration. Slide the holder back into the remote control.

Note: If the battery is installed incorrectly the remote control will not work.





# **Getting Started**

### **Power Supply**

### **AC Operation** (External AC-DC Power Adapter)

- This unit is equipped with a "DC jack" that should only be used with the supplied AC adapter to operate the unit. Use of other adapters may damage the unit or cause it to malfunction.
- Plug the tail end of the AC adapter into the DC-jack (socket) on the rear of docking station.
- Insert the plug of the AC adapter into a wall outlet with AC power not controlled by a wall switch.
- Press the POWER ON/OFF/PLAY/PAUSE button to switch on the unit.

# **Getting Started**

## **Dock Adapters**

Choose the dock adapter that fits your iPhone/iPod. Insure your iPhone/iPod fits snugly into the correct adapter.



iPhone iPhone 3G iPhone 3Gs iPhone 4





iPod classic 80GB 120GB 160GB





iPod touch





iPod photo





iPod 5th generation





iPod nano 6th generation 5th generation 4th generation





iPod 4th generation 3rd generation mini





iPod nano 3rd generation 2nd generation 1st generation







Page 10 Page 11

# Operational Instructions

### **Adapter Instructions**

SongPod comes with 6 removable dock adaptors. Using the correct adaptor ensures the proper fit for your iPhone/iPod and helps to reduce the stress on the connector when operating the iPhone/iPod.

#### Installing a dock adapter

- Refer to the compatibility table in this manual and select the correct dock adapter for your iPhone/iPod.
- Place the proper adapter into the dock and press it into position.The adapter will only go in one way. The 30-Pin connector should fit through the opening in the bottom of the adapter.

Carefully align and then gently insert the iPhone/iPod into the dock.

 To remove/replace a dock adapter, first remove the iPhone/iPod, then grip the adapter and pull gently upwards.

Note: Please note that older 3rd, 2nd and 1st generation iPods are incompatible with this unit.



### important!

When connecting your iPhone/iPod to this dock, please ensure that the correct adapter plate is used. Failure to do so may result in damage to the iPhone/iPod and the dock.

# **Operational Instructions**

#### General

The main functions of this system can be operated by the controls on the top panel of the docking station, or by the buttons on the remote control. If a specific function can only be operated by the remote control, this will be clearly indicated in this manual. When operating this system with the remote control, make sure that the Infrared transmitter on the front of the remote control is pointed at the remote sensor on the front panel of the docking station.

### Docking Your iPhone/iPod

Press the & button and gently dock your iPhone/iPod into the 30 pin connector on the front of the docking station. Do not force. If you have not already downloaded the free app from the iTunes App Store, you will see the following message on your iPhone/iPod Touch display: "This accessory requires an application that you do not have installed. Would you like to install it from the app store?" The purpose of this message is to advise you that you must download the app to enjoy the enhanced features of SongPod. (See page 15 for more details.) You will have full access to all the standard features of SongPod without installing the app.

Note: The 4G iPod, iPod Classic and 5G iPod are not supported for charging with SongPod.

### tip!

In the event you lose power while your iPhone/iPod is docked, please remove and dock your iPhone/iPod again after power is restored.

# Operational Instructions

### **Dock Operation and Controls**

#### iPhone/iPod Playback

With SongPod turned on, press the **PLAY/PAUSE** button on the docking station to begin playback.

#### **Volume Controls**

To increase or decrease the system volume, press the **VOLUME** + or - button on the remote control or **VOLUME** + or - on the top panel of the docking station.

If the volume is less than the default level when SongPod is put into standby, it will return to the default volume level upon powering back on. If the volume is higher than the default level when SongPod is put into standby, it will remain at that volume level upon powering back on.

#### **SOUND Button** (On Remote Control Only)

This button allows you to choose between the two available audio modes, standard sound and virtual surround sound.

#### Play/Pause ►/II Button

Press this button on the remote control to begin playback of your iPhone/iPod. Press again to pause playback.

### Skip ⊷ (Forward)/Skip → (Back) Button (On Remote Control Only)

During playback press to skip forward or backward to the next or previous track.

#### MENU Button (On Remote Control Only)

Press this button to access the menus on your iPod classic/nano and in the iPod app on your iPhone/iPod touch. Pressing this button continuously will navigate you through the different menu features on your iPhone/iPod.

#### **V**/**△ Up/Down Navigation Button** (On Remote Control Only)

After pressing the **MENU** button to access the iPhone/iPod Menu, press the  $\checkmark$ / $\land$  buttons to move up or down within the Menu display.

#### **ENTER Button** (On Remote Control Only)

After highlighting your desired selection in the Menu, press the **ENTER** button to choose that selection.

#### **POWER OFF**

Press and hold the  $\circlearrowleft$  button to power off the dock. The blue ambient light will shut off.

Note: All of these controls work the same with or without the myDock app installed.

# **Operational Instructions**

### **Dock Operation with App**

#### myDock App (iPhone & iPod Touch only)

SongPod is designed to work hand-in-hand with a feature enhancing app. This app brings many new features that work seamlessly with the dock, including:

- Digital FM radio controls
- Clock & alarm
- Music equalizer
- Local weather



#### **Download & Install**

There are 2 ways to download & install the free app:

#### Option 1

- Dock your iPhone/iPod touch into the docking station.
- On your device's screen you will see a prompt asking if you would like to download the free app.
- Press "Yes" on your iPhone/iPod to be taken directly to the app download screen in the Apple App Store.
- Select the app, myDock, and continue to download and install.

#### Option 2

- Turn on your iPhone/iPod touch and navigate to the App Store.
- Tap the "Search" icon at the bottom of your screen and search for "myDock".
- Open the myDock app page and tap the "Free" button in the upper right side of the screen.
- Tap "Install" and enter your App Store password to begin download and installation.

Note: Your iPhone/iPod touch must be connected to the Internet to download the free app.

# Operational Instructions

### **Launch & Operation**

Once the myDock app is installed, navigate to the app on your device and tap the icon to launch the app.

#### **Home Screen**




### **App Settings**



### **Alarm Settings**



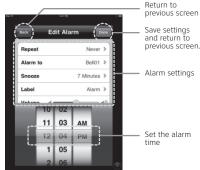


# **Operational Instructions**

### **Sleep Settings**



60 Minutes



### iPod Music Controls

Choose the length

of time you would

that time the dock

will automatically

like the dock to

stav awake. At

"SLEEP".



#### **EQ Settings**



#### **FM Radio Controls**



Press to add the correct station to your favorites list.

Press once to tune to your desired station. Press and hold to auto seek.

Your favorite stations list

## **Troubleshooting**

Symptom	Possible cause	Solution
Unit does not respond (no power)	AC adapter is not plugged into a wall outlet or the connector is not plugged into the DC IN jack on the back of the unit.	Verify the wall outlet that the AC adapter is plugged into is not controlled by wall switch and if it is, confirm the wall switch is turned on.
iPhone/iPod does not dock properly	Using no or wrong iPhone/ iPod dock adapter.	Make sure the dock adapter is the proper fit for the iPhone/iPod.
	iPhone/iPod is not installed properly.	Remove the iPhone/iPod from the unit and check for obstruction on the connections of the docking station and of the iPhone/iPod. Then reset the iPhone/iPod into the docking station.
iPhone/iPod does not respond to the unit	iPhone/iPod is not installed properly.	Remove the iPhone/iPod from the unit and check for obstruction on the connections of the docking station and of the iPhone/iPod. Then reset the iPhone/iPod into the docking station.
	iPhone/iPod is locked up/ frozen.	Make sure your iPhone/iPod is working properly before docking it into the unit. Please refer to the iPhone/iPod manual for details.
	Using first or second generation iPod, iPod shuffle or other devices.	This unit cannot control these iPods or other devices.
iPhone/iPod is not charging	iPhone/iPod is not installed properly.	Remove the iPhone/iPod from the unit and check for obstruction on the connections of the docking station and of the iPhone/iPod. Then reset the iPhone/iPod into the docking station.
	iPhone/iPod is locked up/ frozen.	Make sure your iPhone/iPod is working properly before docking it into the unit. Please refer to the
	iPhone/iPod battery has a problem.	iPhone/iPod manual for details.
iPhone/iPod is not playing but no audio coming out of the dock speakers	iPhone/iPod is not installed properly.	Remove the iPhone/iPod from the unit and check for obstruction on the connections of the docking station and of the iPhone/iPod. Then reset the iPhone/iPod into the docking station.
	Docking station is not powered on.	Remove your iPhone/iPod from the dock and press the power button on the docking station. The blue ambient light should illuminate. Redock your iPhone/iPod.

#### Remarks:

If troubleshooting does not eliminate the problem, disconnect the DC IN plug from the back of unit and reconnect it after a few seconds. This resets the unit to it's factory default settings and results in the deletion of all previous settings. In case the problem still exists, see warranty information on page 21 to obtain service.

# Compliance with FCC Regulations

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate Radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to Radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to Radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced Radio / television technician for assistance.

THE SPECIFICATION AND EXTERNAL APPEARANCE OF THE MUSIC DOCK ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.



If at any time in the future you should need to dispose of this product please note that: waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

# Specifications

Power supply: DC 8.5V, 2.2Amps through built-in DC jack
 External AC power adaptor 100V-240V ~ 50/60Hz

- Speaker: Impedance 6  $\Omega$  2.0" Speaker x2

- Amplifier: 5W x 2 THD 10%

# Warranty Information

### **Limited Warranty**

The AT&T brands are used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to Concept 101 LLC at **www.att.com/electronics** or call **1** (888) 920-8680 from the USA or Canada.

Concept 101 LLC warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of one (1) year (90 day Labor and 1 year Parts). Concept 101 LLC agrees that it will, at its option, replace the defective product with either a new or remanufactured docking station equivalent to your original purchase during the warranty period. Should the Parts warranty period exceed the Labor warranty period, Concept 101 LLC will supply at no charge for the remainder of the Parts warranty, any new or remanufactured replacement parts as required by the product. During this period all labor and service charges will become the responsibility of the customer.

Exclusions: This warranty does not apply to the appearance or exterior of the product which may have been damaged or defaced, altered or modified in design or construction. Further, this warranty does not apply if the serial number is altered or removed, or if there is any damage due to power line surge, user damage to the AC power cord, connection to improper voltage source, general misuse, accidents, or repair attempts by unauthorized service agents. Other exclusions include ear pads, rechargeable and non-rechargeable batteries.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; Concept 101 LLC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call

1 (888) 920-8680, or visit our website, www.att.com/electronics, to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

Concept 101 LLC does not warrant that the docking station will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantily, or fitness for a particular purpose other than the purpose identified within this user's manual. Concept 101 LLC has made every effort to ensure that this user's manual is accurate, and disclaims liability for any inaccuracies or omissions that may have occurred, information in this user's manual is subject to change without notice and does not represent a commitment on the part of Concept 101 LLC. Concept 101 LLC reserves the right to make improvements to this user's manual and/or to the products described in this user's manual, at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us through our website.





www.att.com/electronics